Havis, Inc.
75 Jacksonville Road, PO Box 2099
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

Installation Instructions
C-CB-LOCK
Lock Option For Combo Box Series

Warning: Please read all instructions prior to installation of the armrest lock.

TOOLS REQUIRED:

Phillips Screw Driver

Adjustable Wrench

HARDWARE: (Supplied in Kit)

Qty.	Description	Qty.	Description
1	Lock Assembly Kit	2	#8-32 PEM Studs
1	Lock Arm Bracket	2	#8-32 Hex Nuts
1	Lock Catch Bracket		

INSTALLATION:

1. **Remove Armrest Pad:**
   - Remove the four screws that attach the armrest pad, and set the pad aside. Keep all of the hardware, as the pad will need to be reattached to complete installation.

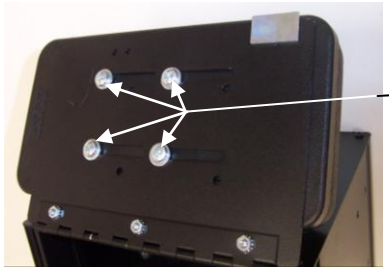

2. **Attach Lock Catch Bracket to Inside of Armrest:**
   - Place the two #8-32 PEM studs through the two holes provided, and hold in place. The two PEM studs do not need to be crimped.
   - Place the Lock Catch Bracket onto the two PEM studs in the orientation shown, and secure with two #8-32 hex nuts.

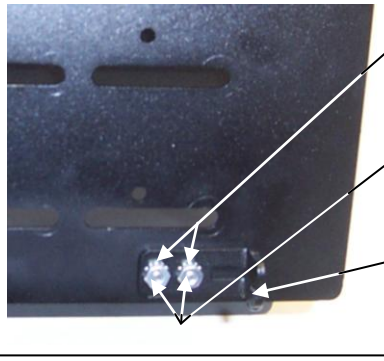

3. Remove Knockout From Panel:

- Remove the plastic knockout from the panel side hole.
- Verify that the alignment notch is oriented exactly as shown. If it is not, rotate and/or flip over the panel to match this orientation.

4. Assemble Lock:

- Lay out all pieces to the lock assembly as shown in the picture. Note that the Lock Assembly Kit may include additional hardware not pictured; any such hardware is not needed.
- Insert the Mounting Shell into the panel hole, and place the Trim Ring on the inside of the panel as a washer. Secure with the Mounting Shell Nut.
- Insert the Tumbler into the Mounting Shell, noting the orientation of the key.
- Place the Lock Arm Bracket onto the Tumbler, orienting it to be horizontal when unlocked and vertical when locked, and noting the orientation of the catch. Secure with the Locknut and Screw.

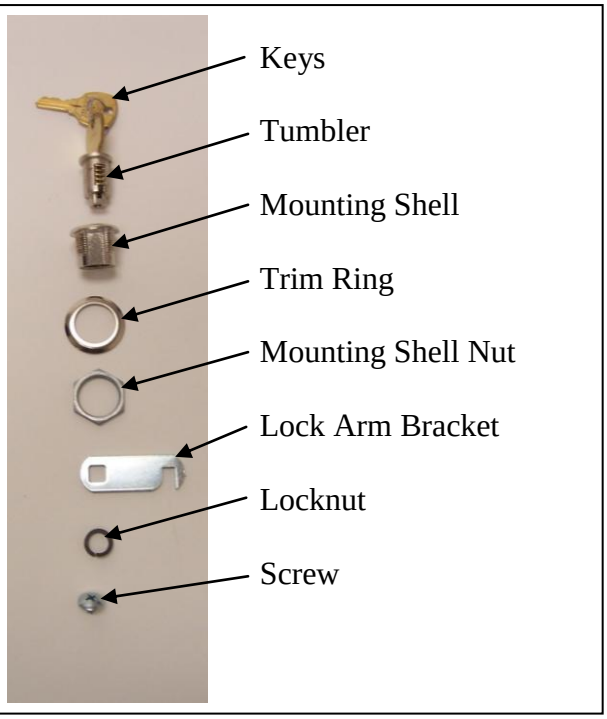

5. Finish and Test:

- The assembled lock should look as pictured. Test for correct operation. Note that the Lock Arm Bracket may need to be bent to correctly engage the Lock Catch Bracket.
- Re-attach the armrest pad removed during Step 1.